



Client Home Instruction


This document has been provided to:

- Guide you through your recordings
- List daily instructions on how to use your DLP

What's Included

Digital Language Processor (DLP):
The DLP records the child's natural language environment.
Wall Charger:
Recharges the LENA DLP battery when connected via the USB cable.
USB Cable:
Connects the LENA DLP to the wall charger to recharge the DLP battery.
LENA Clothing:
Stylish and comfortable - the LENA clothing is a critical part of using the LENA System. The LENA DLP fits snugly and unobtrusively into the pouch hidden in the front chest pocket.

Getting Familiar with your DLP

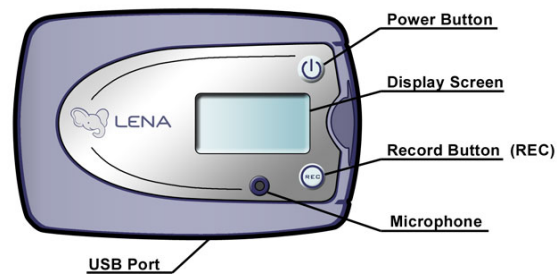

Power Button: Press and hold the power button for 3 seconds to turn on or off.

Display Screen: Displays the current status of your DLP. Example: "Recording," "Charging," etc.


Record button: Press and hold 'REC' button until display screen reads "Recording."

Microphone: Collects audio data while DLP is in 'REC' mode.

Note: Place the DLP in the LENA Clothing front pocket to work properly.

USB Port: Connection port for USB cable to wall charger.

Inserting the LENA DLP

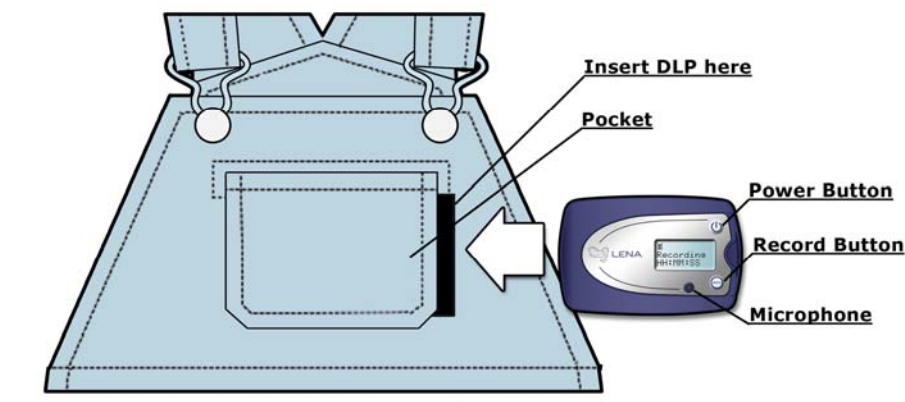

Warnings and Suggested DLP USE:

- For safety reasons, remove the DLP from your child's LENA clothing while they are in a car seat or any other safety harness. It is appropriate to keep the DLP within four feet of your child while you are traveling.
- Remove LENA clothing during naps or sleep periods, as you would any other garment not intended for sleepwear. However, leave the DLP in "Recording" mode within the LENA clothing and place it near your child.
- You may pause your recording by pressing the "Rec" button. Press "Rec" again to resume recording. The DLP will shut off for a pause exceeding 15 minutes. Power DLP back on and press "Rec" to resume recording.
- Clothing worn over the DLP pocket will interfere with recording quality.
- LENA clothing is not flame retardant.

The Night Before

Fully charge the LENA DLP before using. This can take up to 3 hours if the battery is completely discharged.

- Connect the DLP to the wall charger using the USB cable.
- The display screen on the LENA DLP should read “Charging.”
- When the battery is fully charged, the display screen will read “Charged.”

In the Morning

Step 1. Unplug the DLP

- Unplug the wall charger from the wall outlet.
- Unplug the DLP from the wall charger and remove the USB cable.

Step 2. Turn the DLP On

- Press and hold the power button for 3 seconds. This will turn the DLP on. The display screen will read “Sleeping.”

Step 3. Record

- When you’re ready to record, have the LENA Clothing nearby, as you will need to put the DLP into the front pocket, and dress your child in the clothing.
- Make sure the DLP is on. Press and hold the ‘REC’ button until display screen reads “Recording.” This marks the beginning of your recording.
- Immediately place the DLP into the front pocket of the LENA Clothing, snap the pocket closed, and dress your child in the clothing.
- Go about your normal day.

At Bedtime

Step 1. Remove the DLP from the child's pocket

- At the end of the day, remove the DLP from the child's LENA clothing pocket.
- Press and hold the power button for 3 seconds or until the DLP turns off.
- You can now dress your child in their regular clothing. The LENA clothing is not intended for sleepwear.

Step 2. Return your DLP to:

Name: _____

Address: _____

Telephone: _____

Return date: _____

Other: _____
